

Instructions

Wire Coffee Table VP17 Verner Panton 2026



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Wire Coffee Table VP17

Verner Panton

2026

Safety precautions

- Dispose of plastic bag from packaging and keep out of reach of children
- Make sure not to scratch surfaces during assembly


Contents

- A** Wire table
- B** Feet x 5
- C** Screws x 5
- D** Allen Key

Cleaning instructions

- For daily care, it is recommended to dust the surface with a soft, dry cloth. Cleaning should be done only by using a detergent specifically developed for stainless steel. Cleaning agents not developed specifically for stainless steel may permanently damage the surface. Always follow the cleaning instructions provided by the detergent manufacturer carefully.

A

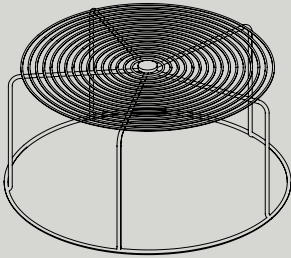

B



C




D



**Please follow steps 1 - 2
to assemble the product.**

Step 1 / 2

In case the table is placed on an uneven floor, gliders are provided that can be installed to overcome the floor's unevenness. Start by turning the table upside down, placing it on a soft surface that will not scratch the table.

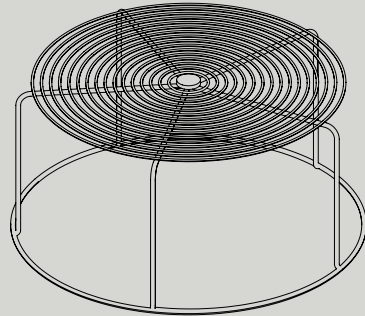

Step 2 / 2

Place the five feet (B) and screws (C) in the predrilled holes and install by tightening the screws. Your product is now ready for use.

