

Designed by Jacques Adnet

### PRODUCT



Item no.: 61070-XX  
+ style code

### DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

### VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass

### MIRROR VERSION

Series contains the following:


Ø45, Ø58, Ø70



### ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

### COLOURS

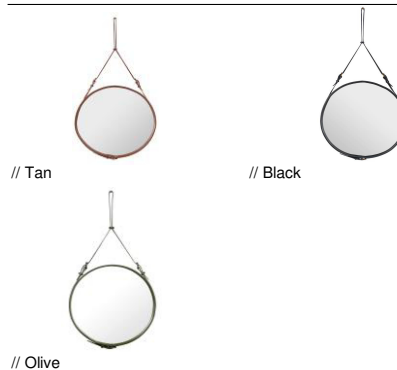

// Tan

// Black

// Olive

### FACTS

#### MEASUREMENT

H:140 X Ø70 cm  
Depth of mirror frame: 7 cm  
Strap width: 2.3 cm  
Leather thickness frame 4,5 X two layers: 9 mm  
Leather thickness strap: 4,5 mm  
Mirror glass 4mm according to EN 1036-2

#### WEIGHT ITEM

7,7 kg

#### PACKAGING TYPE

Cardboard box

#### PACKAGING MEASUREMENT - L X W X H CM

L:84 W:84 H:13,5 CM

#### WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
  - Bracket: Burnished brass
  - Drywall plug Driva TP12
  - Hanger bolt
  - Hexalobular socket key
  - Tack-It removable adhesive
  - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1544 g
- Cardboard box inner packaging quality ---: 1050 g
- Polystyrene EPS foam: 840 g

#### WEIGHT PACKAGING - TOTAL

11,5 kg

#### NUMPER OF PARCELS

1 pcs.

Designed by Jacques Adnet

### CLEANING AND MAINTENANCE

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

### ENVIRONMENT

Parts can be separated and sorted for recycling.

### INSTALLATION INSTRUCTIONS

56-15-300-02 Mounting instr. Adnet Circular Mirror.

**DK**

**RENDSERINGS**

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**EN**

**CLEANING**

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**DE**


**REINIGUNG**

Für normale Reinigung, saugen Sie häufig mit einem sauberen, trockenen Tuch ab. Wenn die Lederart verschmutzt ist, kann sie mit einem feuchten, weichen Tuch und einer geringen Menge milden Seifenlauge in lauwarmem Wasser abgewaschen werden. Verwenden Sie keine Spotreinigung; reinigen Sie die gesamte Oberfläche. Wischen Sie mit einem feuchten Tuch ab und trocknen Sie mit einem sauberen, weichen Tuch ab.

Für Flecken und Verschüttungen, wischen Sie überschüssige Flüssigkeit sofort mit einem sauberen Tuch oder Schwamm ab; lassen Sie das Leder lufttrocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder lufttrocknen; verwenden Sie niemals einen Haartrockner oder eine andere Wärmequelle zum Trocknen des Leders.

Für hartnäckige Flecken und Verfärbungen, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm. Spülen Sie gründlich ab und lassen Sie lufttrocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder dissipieren. Verwenden Sie kein Wasser oder versuchen Sie, einen Fettfleck zu waschen.

Verwenden Sie keine Sattelseife, Reinigungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reiniger, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

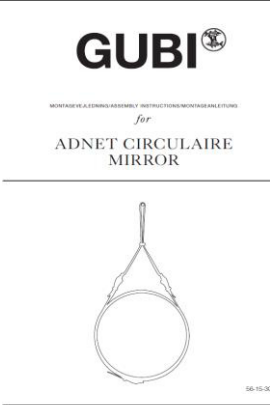

**INDHOLD/CONTENTS/INHALT:**


Ø1 x 1 x 1 x 1 x 1 x 1 x 1

**1. DK: Monterings af holder.**  
**EN: How to mount the bracket.**  
**DE: Montage der Halterung.**

**DK:** Trævæg  
**EN:** Wooden wall  
**DE:** Holzwand

**DK:** Betonvæg  
**EN:** Concrete wall  
**DE:** Betonwand

**2. DK: Monterings af metal skive til magnet.**  
**EN: How to mount the metal spacer for the magnet.**  
**DE: Montage der Abstandhalter für den Magnet.**

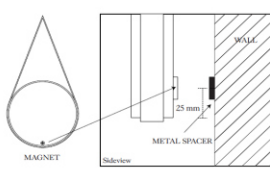


**DK:** Monter den muntlagende metalplade på væggen 25 mm fra bunden af spejlet. Magnetens på bagsiden af spejlet vil dermed sikre, at det altid hænger fast ind til væggen.

**EN:** Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.

**DE:** Montieren Sie die beigefugte Metallscheibe in der Höhe von 2,5 cm vom unteren Rahmen des Spiegels an der Wand. Der Magnet auf der Rückseite des Spiegels will dadurch sichern, dass der Spiegel immer an der Wand hängt.

### MINIMUM CEILING HEIGHT

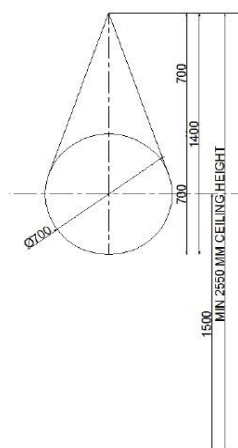


Designed by Jacques Adnet

## PRODUCT



## COLOURS

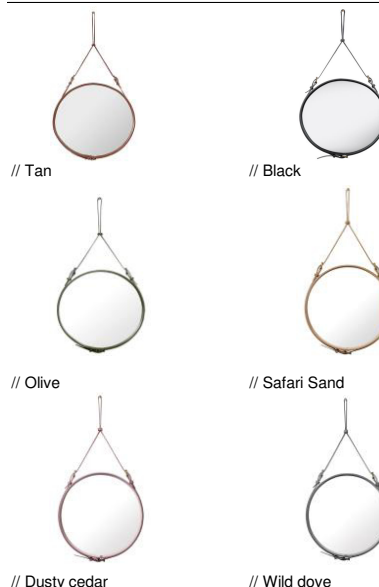

## DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

The mirror is also available three colors in Alcantara in Ø58 cm, Dusty cedar, Safari sand and Wild dove.

## VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass
- Wild dove Alcantara / mirror glass (only available in Ø58 cm)
- Dusty cedar Alcantara / mirror glass (only available in Ø58 cm)
- Safari sand Alcantara / mirror glass (only available in Ø58 cm)

## MIRROR VERSION

Series contains the following:

Ø45, Ø58, Ø70



## ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

## FACTS

### MEASUREMENT

H: 116 X Ø58 cm  
 Depth of mirror frame: 7 cm  
 Strap width: 2.3 cm  
 Leather / Alcantara thickness frame 4,5 X two layers: 9 mm  
 Leather / Alcantara thickness strap: 4,5 mm  
 Mirror glass 4mm according to EN 1036-2

### WEIGHT ITEM

5,7 kg

### PACKAGING TYPE

Cardboard box

### PACKAGING MEASUREMENT - L X W X H CM

L:70 W:70 H:13,5 CM

### WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
  - Bracket: Burnished brass
  - Drywall plug Driva TP12
  - Hanger bolt
  - Hexalobular socket key
  - Tack-it removable adhesive
  - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1150 g
- Cardboard box inner packaging quality ---: 809 g
- Polystyrene EPS foam: 450 g

### WEIGHT PACKAGING - TOTAL

8,1 kg

### NUMPER OF PARCELS

1 pcs.

Designed by Jacques Adnet  
**CLEANING AND MAINTENANCE**

**Leather:**

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**Alcantara:**

For normal cleaning, dust frequently with a clean, dry cloth. If there are difficult spots or stains, use specified Alcantara cleaning products. If such products are not available use a sponge or soft cloth wung in clean water and run over the whole Alcantara surface. Please do not wet the surface excessively. Let it dry and do not use a hair dryer, steam machine or other heat source to dry the Alcantara. Afterwards the surface can be brushed with a soft brush.

**ENVIRONMENT**

Parts can be separated and sorted for recycling.

**INSTALLATION INSTRUCTIONS**

56-15-300-02 Mounting instr. Adnet Circular Mirror.

**DK:** **REINIGUNG**

Reinigen Sie das Spiegelglas häufig mit einem sauberen, trockenen Tuch. Wenn das Spiegelglas verschmutzt ist, kann es mit einem feuchten, weichen Tuch und einer geringen Menge milden Seife und einer minimalen Menge lauwarmen Wassers abgewischt werden. Reinigen Sie das gesamte Spiegelglas. Wischen Sie es mit einem sauberen, weichen Tuch ab und trocknen Sie es mit einem sauberen, weichen Tuch ab.

Bei Flecken und Verschüttungen sofort überschüssige Flüssigkeit mit einem sauberen Tuch oder Schwamm abwischen; lassen Sie das Leder an der Luft trocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder an der Luft trocknen; verwenden Sie niemals einen Haartrockner oder andere Wärmequelle zum Trocknen des Leders.

Für hartnäckige Flecken und Flecken, wenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm an. Spülen Sie gründlich ab und lassen Sie es an der Luft trocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder eindringen.

Verwenden Sie keine Sattelseife, Reinigungsmittel, Lösungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reinigungsmittel, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

**EN:** **CLEANING**

Reinigen Sie das Spiegelglas häufig mit einem sauberen, trockenen Tuch. Wenn das Spiegelglas verschmutzt ist, kann es mit einem feuchten, weichen Tuch und einer geringen Menge milden Seife und einer minimalen Menge lauwarmen Wassers abgewischt werden. Reinigen Sie das gesamte Spiegelglas. Wischen Sie es mit einem sauberen, weichen Tuch ab und trocknen Sie es mit einem sauberen, weichen Tuch ab.

Bei Flecken und Verschüttungen sofort überschüssige Flüssigkeit mit einem sauberen Tuch oder Schwamm abwischen; lassen Sie das Leder an der Luft trocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder an der Luft trocknen; verwenden Sie niemals einen Haartrockner oder andere Wärmequelle zum Trocknen des Leders.

Für hartnäckige Flecken und Flecken, wenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm an. Spülen Sie gründlich ab und lassen Sie es an der Luft trocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder eindringen.

Verwenden Sie keine Sattelseife, Reinigungsmittel, Lösungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reinigungsmittel, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

**DE:** **REINIGUNG**

Reinigen Sie das Spiegelglas häufig mit einem sauberen, trockenen Tuch. Wenn das Spiegelglas verschmutzt ist, kann es mit einem feuchten, weichen Tuch und einer geringen Menge milden Seife und einer minimalen Menge lauwarmen Wassers abgewischt werden. Reinigen Sie das gesamte Spiegelglas. Wischen Sie es mit einem sauberen, weichen Tuch ab und trocknen Sie es mit einem sauberen, weichen Tuch ab.

Bei Flecken und Verschüttungen sofort überschüssige Flüssigkeit mit einem sauberen Tuch oder Schwamm abwischen; lassen Sie das Leder an der Luft trocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder an der Luft trocknen; verwenden Sie niemals einen Haartrockner oder andere Wärmequelle zum Trocknen des Leders.

Für hartnäckige Flecken und Flecken, wenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm an. Spülen Sie gründlich ab und lassen Sie es an der Luft trocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder eindringen.

Verwenden Sie keine Sattelseife, Reinigungsmittel, Lösungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reinigungsmittel, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

56-15-300-02

**INDHOLD/CONTENTS/INHALT**

**1. DK:** Montage der Halterung.  
**EN:** How to mount the bracket.  
**DE:** Montage der Halterung.

**DK:** Trævæg.  
**EN:** Wooden wall.  
**DE:** Holzwand.

**DK:** Betonvæg.  
**EN:** Concrete wall.  
**DE:** Betonwand.


**2. DK:** Monterings af metal skive til magnet.  
**EN:** How to mount the metal spacer for the magnet.  
**DE:** Montage der Abstandhalter für den Magnet.

**DK:** Monter den monteringsplade metalstive på bagved 25 mm fra bunden af spejlet. Magnetten på bagsiden af spejlet vil dermed blive, at det altid hænger tæt ind til væggen.

**EN:** Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.

**DE:** Montieren Sie die beigelegte Metallscheibe in der Höhe von 2,5 cm vom unteren Rahmen des Spiegels an der Wand. Der Magnet auf der Rückseite des Spiegels wird dadurch sichern, dass der Spiegel immer an der Wand hängt.

**MINIMUM CEILING HEIGHT**

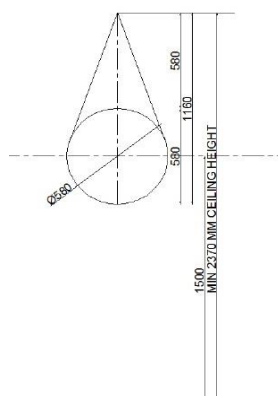

Designed by Jacques Adnet

### PRODUCT



### COLOURS



Item no.: 61045-XX  
+ style code

### DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

### VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass

### MIRROR VERSION

Series contains the following:

Ø45, Ø58, Ø70



### ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

### FACTS

#### MEASUREMENT

H: 90 X Ø45 cm  
Depth of mirror frame: 7 cm  
Strap width: 2.3 cm  
Leather thickness frame 4,5 x two layers: 9 mm  
Leather thickness strap: 4,5 mm  
Mirror glass 4mm according to EN 1036-2

#### WEIGHT ITEM

3,9 kg

#### PACKAGING TYPE

Cardboard box

#### PACKAGING MEASUREMENT - L X W X H CM

L:60 W:60 H:13,5 CM

#### WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
  - Bracket: Burnished brass
  - Drywall plug Driva TP12
  - Hanger bolt
  - Hexalobular socket key
  - Tack-It removable adhesive
  - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ----: 940 g
- Cardboard box inner packaging quality ----: 710 g
- Polystyrene EPS foam: 450 g

#### WEIGHT PACKAGING - TOTAL

6 kg

#### NUMBER OF PARCELS

1 pcs.

## ADNET CIRCULAIRE SMALL // GLASS MIRROR

ADNET COLLECTION

### Designed by Jacques Adnet CLEANING AND MAINTENANCE

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth. For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather. For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot. Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

### ENVIRONMENT

Parts can be separated and sorted for recycling.

### INSTALLATION INSTRUCTIONS

56-15-300-02 Mounting instr. Adnet Circular Mirror.

**DK**

**RENSIGNING**

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth. For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather. For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot. Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**EN**


**CLEANING**

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth. For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather. For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot. Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**DE**

**REINIGUNG**

Für normale Reinigung, Staubsaugen oder mit einem sauberen, trockenen Tuch häufig und oft mit einem sauberen, trockenen Tuch abwischen. Wenn die Leder soiled ist, kann es mit einem sauberen, feuchten Tuch und einer geringen Menge milden Seife und lauwarmem Wasser abgewaschen werden. Reinigen Sie die gesamte Oberfläche. Wischen Sie mit einem sauberen, feuchten Tuch ab und trocknen Sie mit einem sauberen, trockenen Tuch. Für Flecken und Verschüttungen, wischen Sie überschüssige Flüssigkeit sofort mit einem sauberen Tuch oder Schwamm ab; lassen Sie das Leder lufttrocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder lufttrocknen; verwenden Sie niemals einen Haartrockner oder andere Wärmequelle zum Trocknen des Leders. Für hartnäckige Flecken und Flecken, wenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm an. Spülen Sie gründlich ab und lassen Sie lufttrocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder dissipieren. Wenden Sie kein Wasser an und versuchen Sie nicht, einen Fettfleck zu waschen. Verwenden Sie kein Sattelschmiermittel, Reinigungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reiniger, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

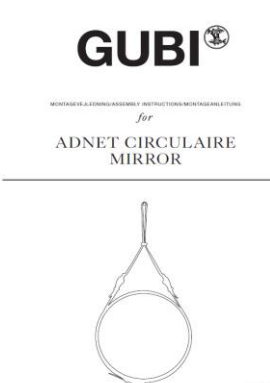


**INDHOLD/CONTENTS/INHALT**

x1 x1 x1 x1 x1 x1 x1

**MONTAGEVELEDNING**  
**ASSEMBLY INSTRUCTIONS**  
**MONTAGEANLEITUNG**


**ADNET CIRCULAIRE**

**2. DK: Montering af metal skive til magnet.**  
**EN: How to mount the metal spacer for the magnet.**  
**DE: Montage der Abstandshalter für den Magnet.**

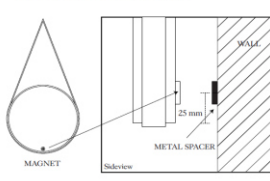


**1. DK: Montering af holder.**  
**EN: How to mount the bracket.**  
**DE: Montage der Halterung.**

**DK: Trævæg.**  
**EN: Wooden wall.**  
**DE: Holzwand.**



**DK: Betonvæg.**  
**EN: Concrete wall.**  
**DE: Betonwand.**



**DK: Monter den mesttunge metaliske på væggen 25 mm fra bunden af spejlet. Magnetens på baggrunden af spejlet vil dermed sikre, at det altid hænger helt og til væggen.**

**EN: Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.**

**DE: Montieren Sie die beigefugte Metallschabe in der Höhe von 2,5 cm vom unteren Rahmen des Spiegels an der Wand. Der Magnet auf der Rückseite des Spiegels wird dadurch sichern, dass der Spiegel immer an der Wand hängt.**

### MINIMUM CEILING HEIGHT

