

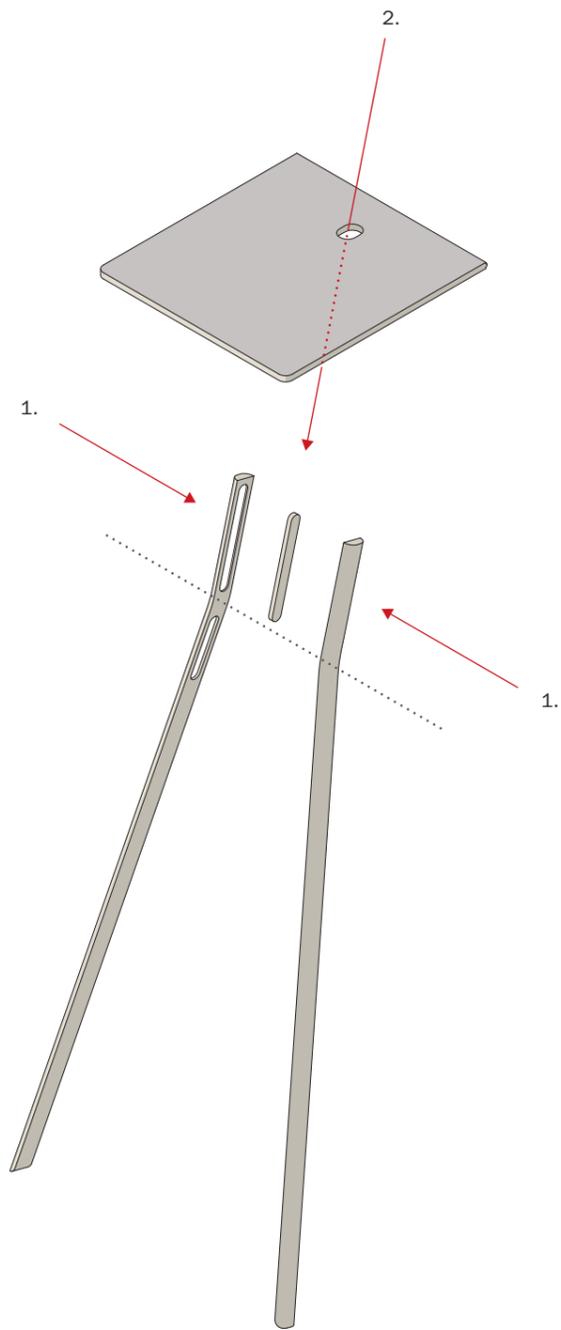


I.

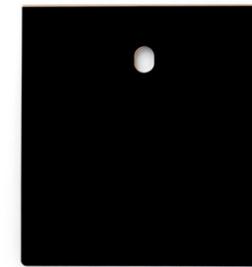

II.

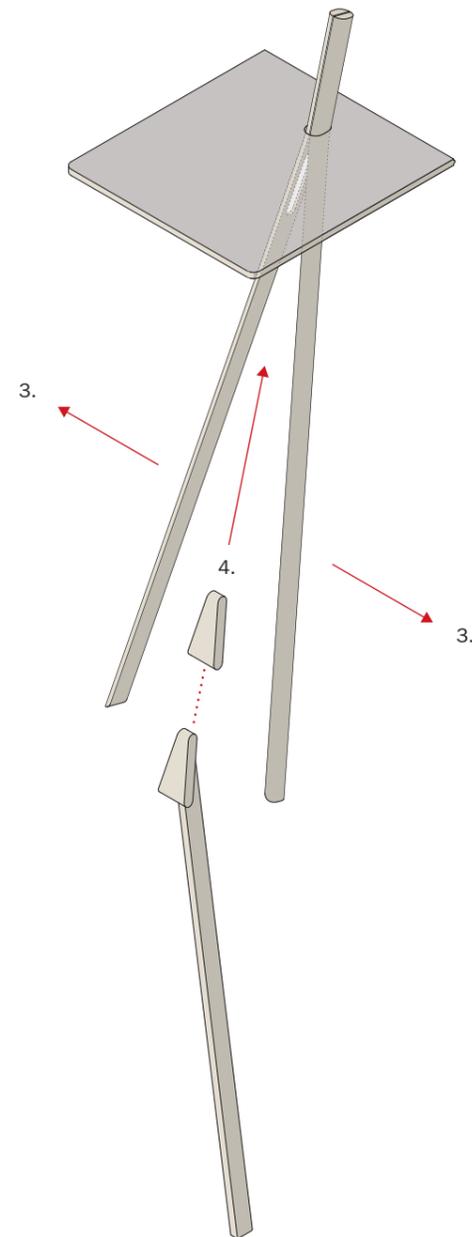

A
Tischplatte
table top



B
Beine
legs



C
Drittes Bein
third leg



D
Keil
spacer bracket



E
Abstandhalter
wedge

I.

1. Den Abstandhalter E in die Aussparung am oberen Ende der Beine B einlegen.

2. Die Aussparung der Platte A über die zusammengesetzten Beine B bis zum Knick aufschieben.

II.

3. Die Beine B unterhalb der Platte A leicht auseinanderziehen.

4. Soll das Stehpult an der Wand angelehnt werden und somit auf zwei Beinen stehen, den Keil D in die Aussparung der Beine einschieben.

Soll das Stehpult frei stehen, wird das dritte Bein C eingesetzt. Hierfür den Keil, der am dritten Bein befestigt ist, in die Aussparung der Beine B einschieben.

Abschließend die Tischplatte A waagrecht ausrichten.

I.

1. Insert spacer bracket E into the opening at the top of legs B.

2. Slide the opening of table top A over the assembled legs B up to the bend.

II.

3. Slightly pull apart legs B underneath table top A.

4. If the standing desk is intended to be leant against a wall and hence to stand on two legs, insert wedge D into legs' openings.

If the standing desk is intended to be free-standing, third leg C is inserted. To do this, insert the wedge which is attached to the third leg into the opening of legs B.

Finally, align table top A horizontally.