

I.

1. Längsteile A und Querteile B zusammen stellen.
Die Kanten der Längsteile A liegen dabei an den Querteilen B an **a**.

II.

2. Klammern C in die Schlitzte der Längsteile A und Querteile B einstecken.
! Die Bohrungen in den Klammern C zeigen dabei nach unten **b**, die überstehende Lasche nach oben **c**.

3. Anschließend in die Bohrungen der Klammern C jeweils zwei Schrauben E mit dem Innensechskantschlüssel F eindrehen.

(Die Bohrungen in der Lattenrostauflage dienen zur späteren Befestigung eines Moormann-Lattenrostes **d**, nicht zur Montage des Stapelbettes.)

III.

Werden Betten gestapelt, greift die überstehende Lasche der Klammer C des unteren Bettes hinter das Längs- bzw. Querteil des oberen Bettes.

Hinweis:

Lattenrost und Matratze sollten zusammen maximal 17,5 cm in der Höhe betragen.
Die Einsenktiefe (Oberkante Lattenrost-Auflage bis Oberkante Bett) beträgt 8 cm; der Überstand der Matratze sollte 9,5 cm nicht überschreiten.

1. Put together longitudinal parts A and crosswise parts B.
The edges of longitudinal parts A rest against crosswise parts B **a**.

2. Insert brackets C into the slots of longitudinal parts A and crosswise parts B.
! The holes in brackets C point downwards here **b**, the protruding flap points upwards **c**.

3. Then use hexagon wrench F to screw two screws E into the holes of each bracket C.

(The holes in the slatted frame support are used to later attach a Moormann slatted frame **d**, not for assembly of the stacking bed.)

If beds are stacked, then the protruding flap engages bracket C of the lower bed behind the longitudinal and crosswise part of the upper bed.

Note:

The slatted frame and mattress together should not exceed 17.5 cm in height.
The sinking depth (upper edge of slatted frame support to the upper edge of the bed) is 8 cm; the mattress should not protrude more than 9.5 cm.



A
Längsteil x 2
longitudinal part x 2



B
Querteil x 2
crosswise part x 2



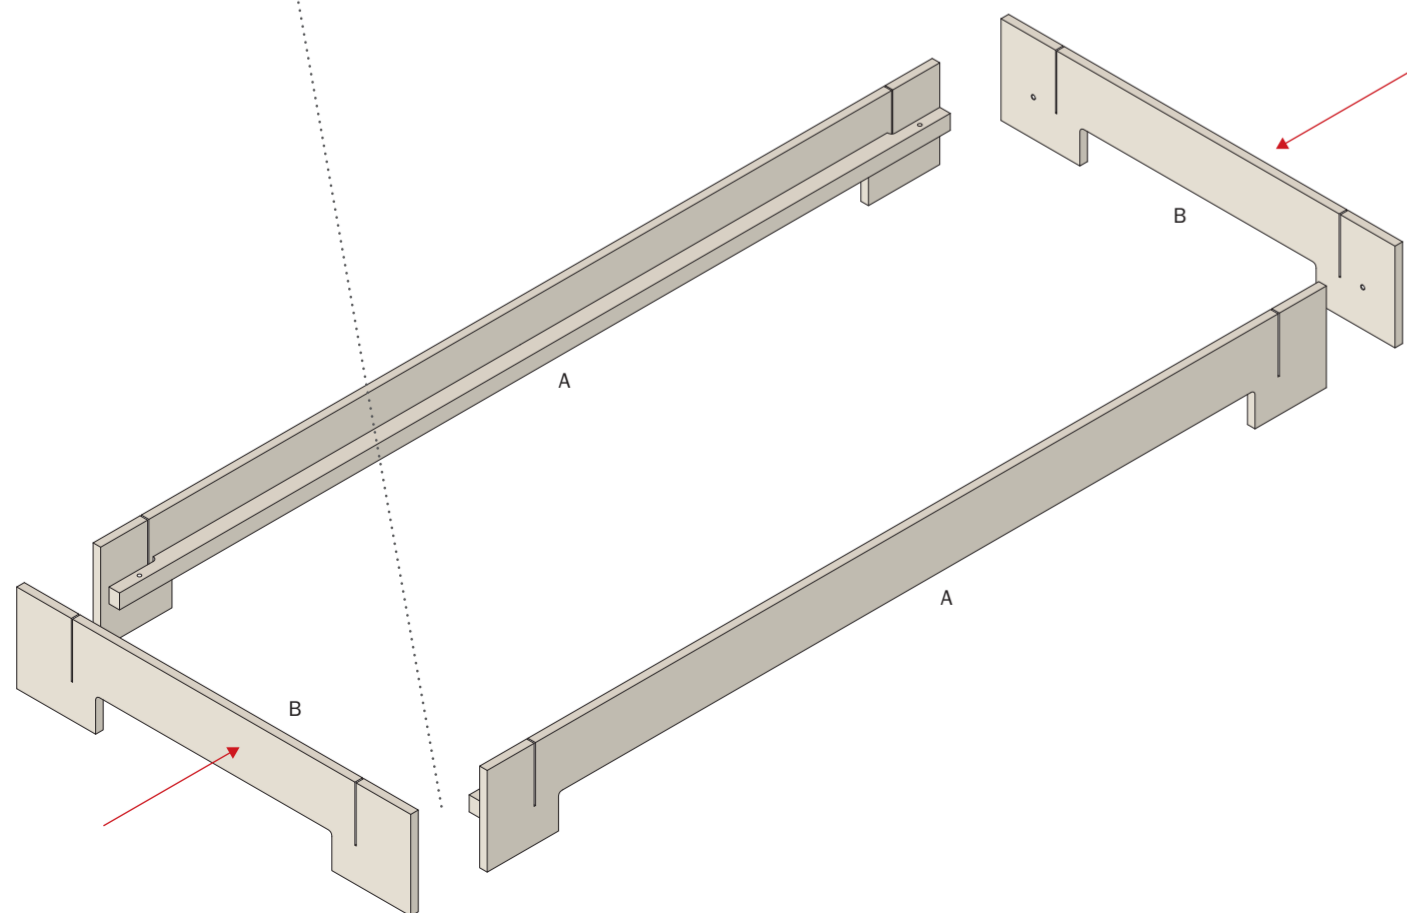
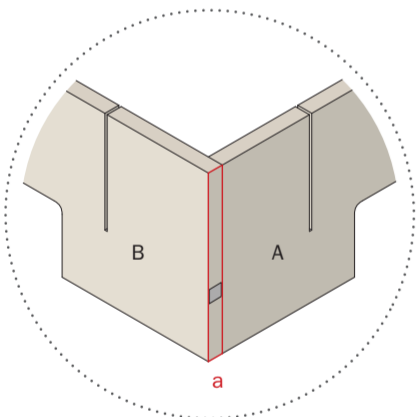
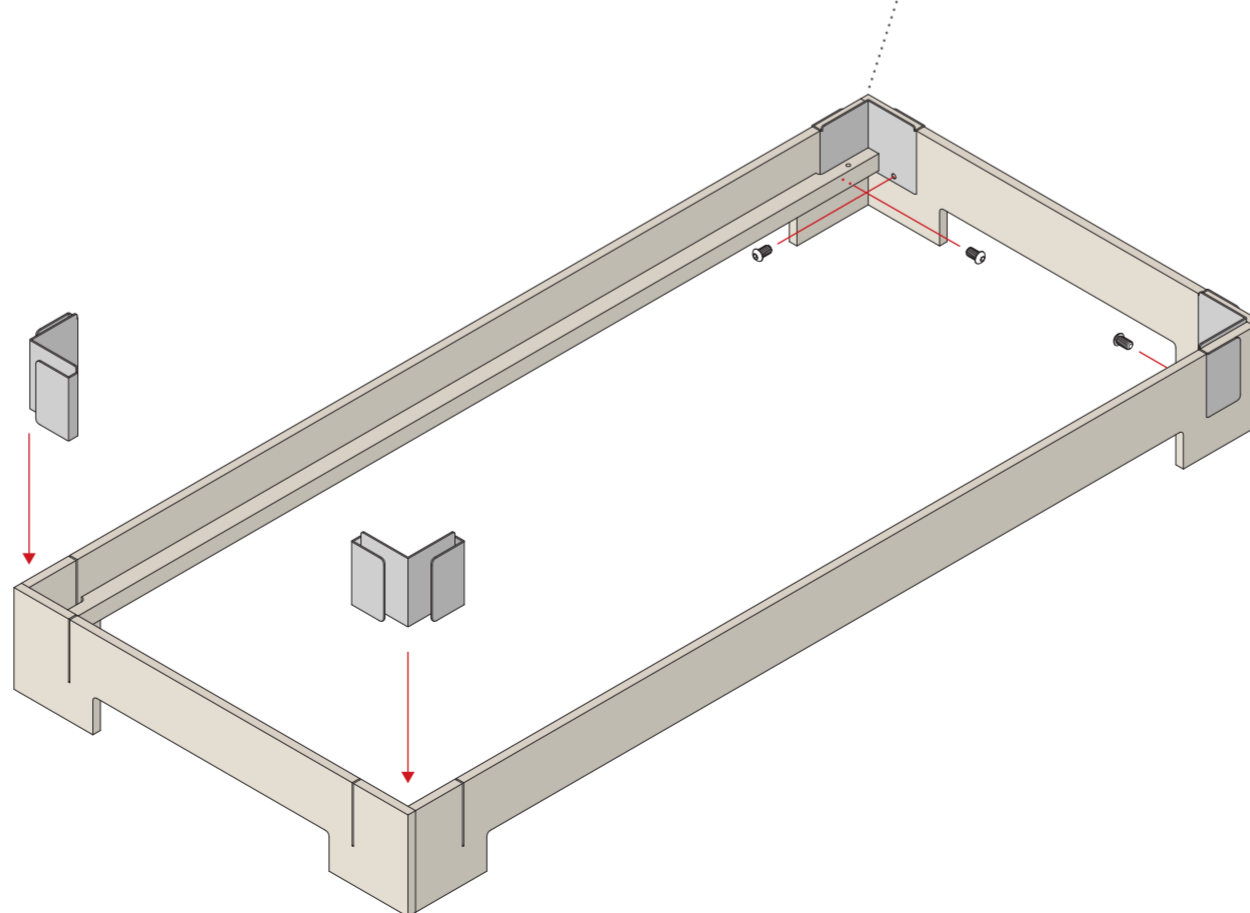
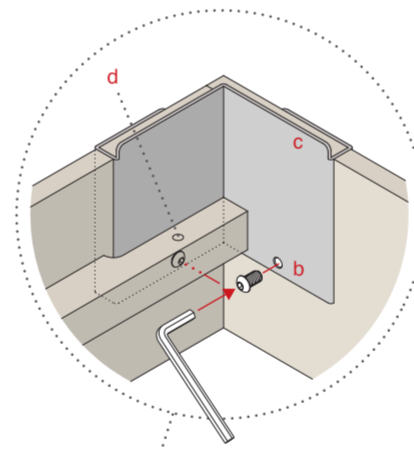
C
Klammern x 4
clamps x 4



E
Schrauben x 8 (M6 x 12)
screws x 8 (M6 x 12)



F
Innensechskantschlüssel
setscrew wrench

I.**II.****III.**